

# Instructions of Impulse Sprinkler

## 1. Diffuser Pin Assembly

Screw the pin into stream to adjust from a heavy to fine stream.

## 2. Deflector Shield Assembly

Press or lift the deflector into stream to reduce or expand the spraying coverage.

## 3. Full Circle Coverage

Lift the trip lever to the up position.

## 4. Partial Circle Coverage

Push the trip lever to the down position, slide the friction collars to adjust any portion of a 360° circle.

